

RGBW-DMX5V CONTROLLER INSTALLATION INSTRUCTIONS



BEFORE YOU BEGIN

Read and follow all safety instructions



WARNING

RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

- This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with the NEC (National Electric Code) and all local codes.
- Turn off electrical power before inspection, installation or removal.
- Use only UL (or other NRTL) approved wire for input/output connections.
- Make sure LEDs and drivers are cool to touch when performing maintenance.
Make sure the supply voltage is the same as the rated voltage of the luminaire.
- Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.
- Keep tightly closed when in operation



Prepare Electrical Wiring



Electrical Requirements

Must check if the local voltage range is correspond with the working voltage of the fixture. Use min. 75°C supply.



Grounding Instructions

The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes.



Follow all applicable safety procedures and use Personal Protective Equipment such as hardhats, safety glasses, reflective vest, electrical safety gloves, fall protection equipment and safety toe boots during the installation, operation, and maintenance of the luminaire.


RGBW-DMX CONTROLLER INSTALLATION INSTRUCTIONS



RGBW-DMX5V

Zone	4 zone
Signal	DMX512 protocol
Dimensions	L 7" x H 1.3" x D 1.9"
Features	12 built-in mode, scene
Operating Temp.	-22°F ~ 131°F (-30°C ~ 55°C)

Key Functions

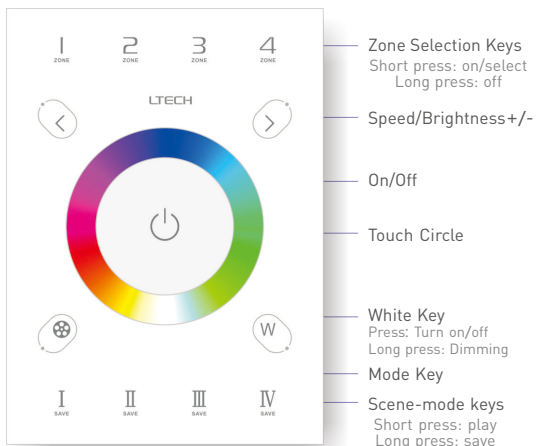


The Changing Mode (Press to Select):

1. Static Red
2. Static Green
3. Static Blue
4. Static Yellow
5. Static Purple
6. Static Cyan
7. Static White
8. RGB Jumping
9. 7 Colors Jumping
10. RGB Smooth
11. 7 Colors Smooth
12. Static Black


*** Any damage caused from improper installation will void warranty and not be accepted for RGA (Return Goods Authorization). Improper installation includes but not limited to field-drilled hole(s), improper latch closure and any damage caused during installation.**

RGBW-DMX CONTROLLER INSTALLATION INSTRUCTIONS


Product Size:

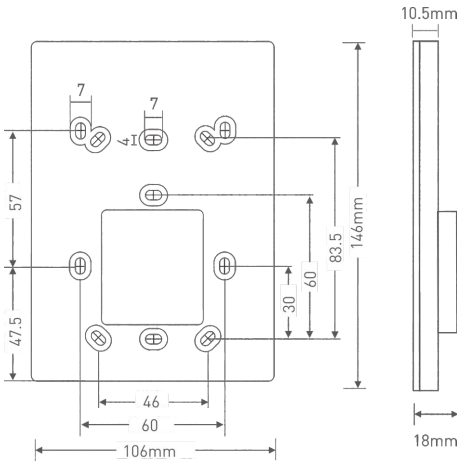

Terminals

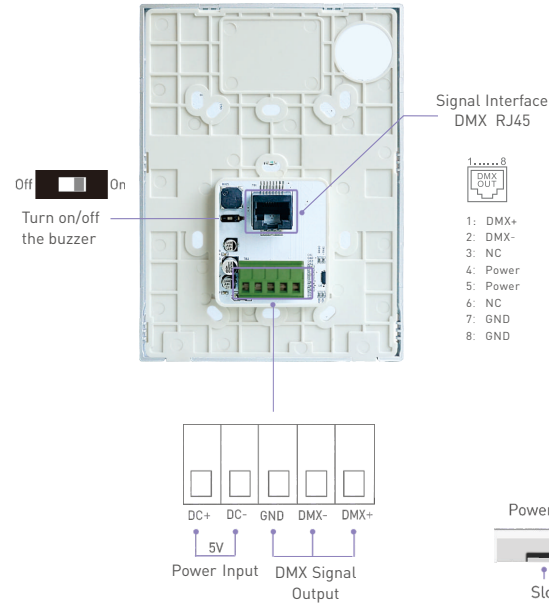

Decoder:

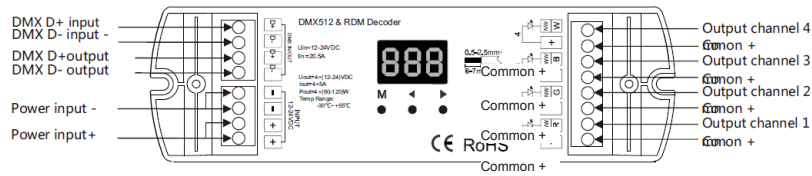


RGBW-DMX5V (4-channel DMX decoder)


Dimensions	L 6.7" x W 2" x D 0.9"
Output Current	5A / channels
Input Voltage	12-24V DC
Output Power	4 x (60-120)W
Frequency	PWM output

RGBW-DMX CONTROLLER INSTALLATION INSTRUCTIONS


Installation Instruction:

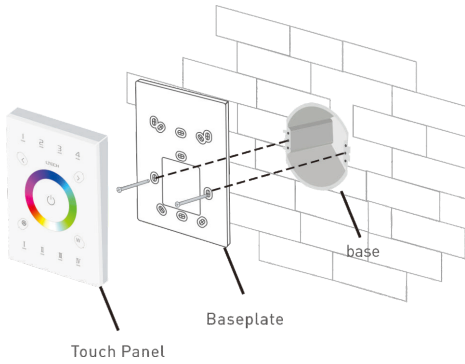


1. Install the back box into the wall. Typical boxes as below:

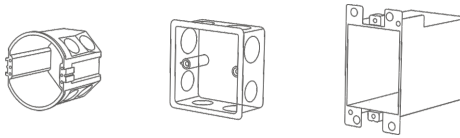


2. Use a straight screwdriver to pry the position shown:

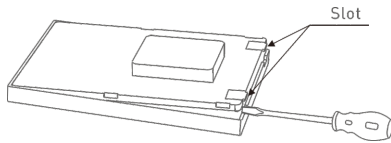



3. screw the baseplate and the back box in the wall firmly.

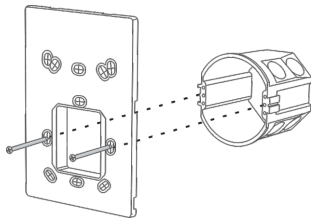

4. Connect in a right way and put the power adapter into the back box.

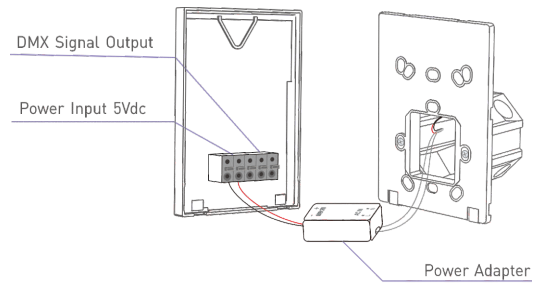

5. Embed the upper touch panel into the baseplate and then tap the bottom to press into the slots.

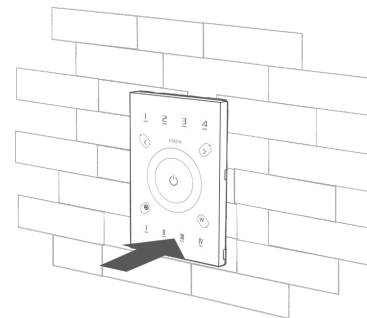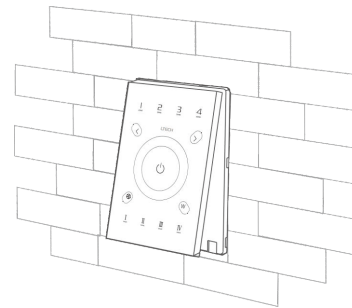

RGBW-DMX CONTROLLER INSTALLATION INSTRUCTIONS

DMX Output Wiring

